



# TELEMARK Power Supply Installation

Product manuals are found on the enclosed USB drive  
Please read manuals before installing and operating equipment

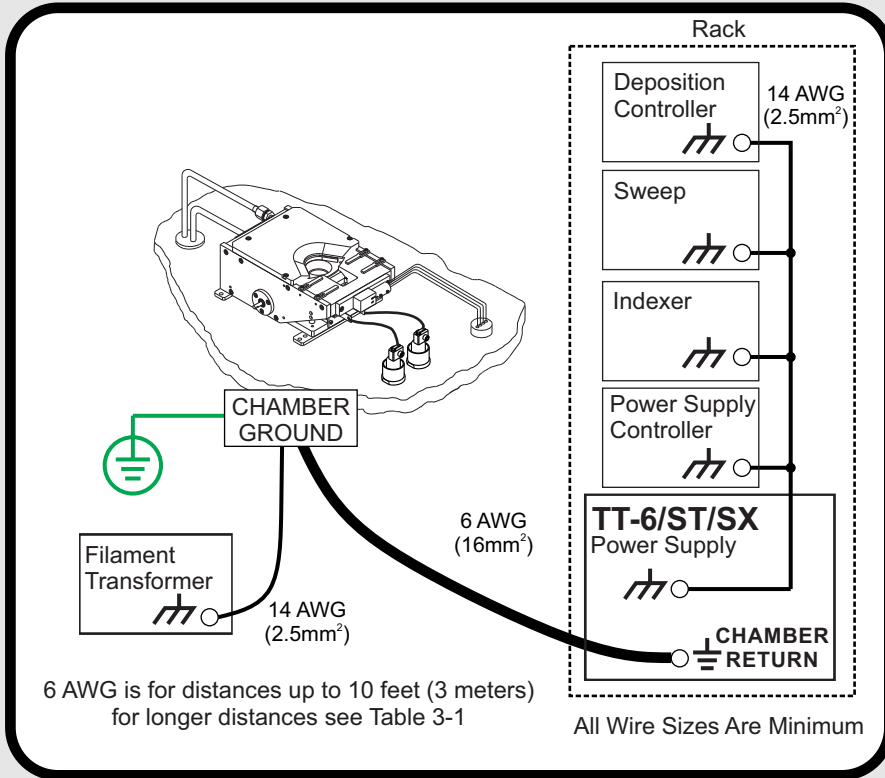

**Review Safety and Grounding instructions in manual**

**Do Not Block Air Flow Vents**

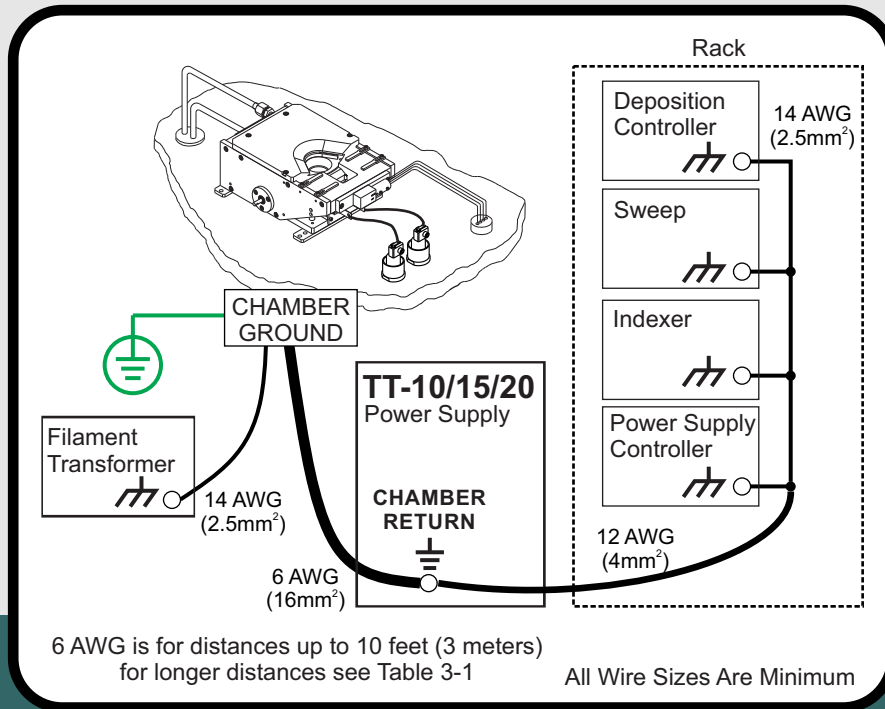

### Power Supply Specifications

Model	Line Frequency	Line Current
ST-4 208VAC	50/60Hz	16A
ST-4 400VAC	50/60Hz	9A
ST-6 208VAC	50/60Hz	23A
ST-6 400VAC	50/60Hz	12A
ST-8 208VAC	50/60Hz	30A
ST-8 400VAC	50/60Hz	15A
SX-10 208VAC	50/60Hz	39A
SX-10 400VAC	50/60Hz	22A
SX-12 208VAC	50/60Hz	42A
SX-12 400VAC	50/60Hz	27A
TT-6 208VAC	60Hz	35A
TT-6 400VAC	50/60Hz	23A
TT-10 208VAC	60Hz	60A
TT-10 400VAC	50/60Hz	35A
TT-15 208VAC	60Hz	73A
TT-15 400VAC	50/60Hz	42A
TT-20 400VAC	50/60Hz	50A

All Power Supplies Line Voltages +/-5%  
Check manual for proper line fuse rating

